

Hook Install Instructions




1. Place hook on wall where you would like to mount it.



2. Mark holes with a pencil.

3. Drill pilot holes with 1/16" drill bit to 3/4 of depth of screw.

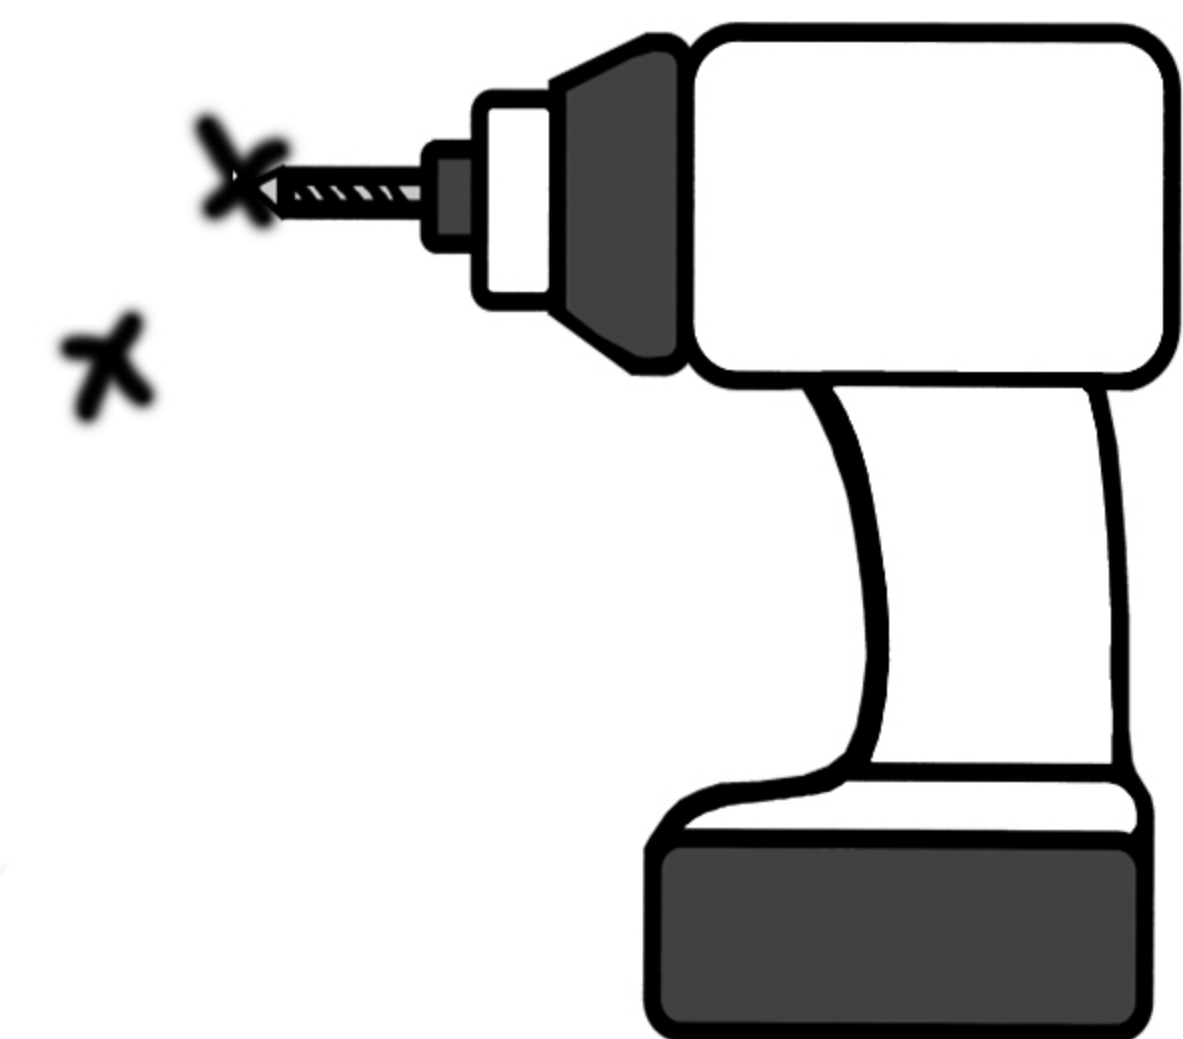

4. Use appropriate screw head/bit to mount hook to wall.

