


Hook Install Instructions

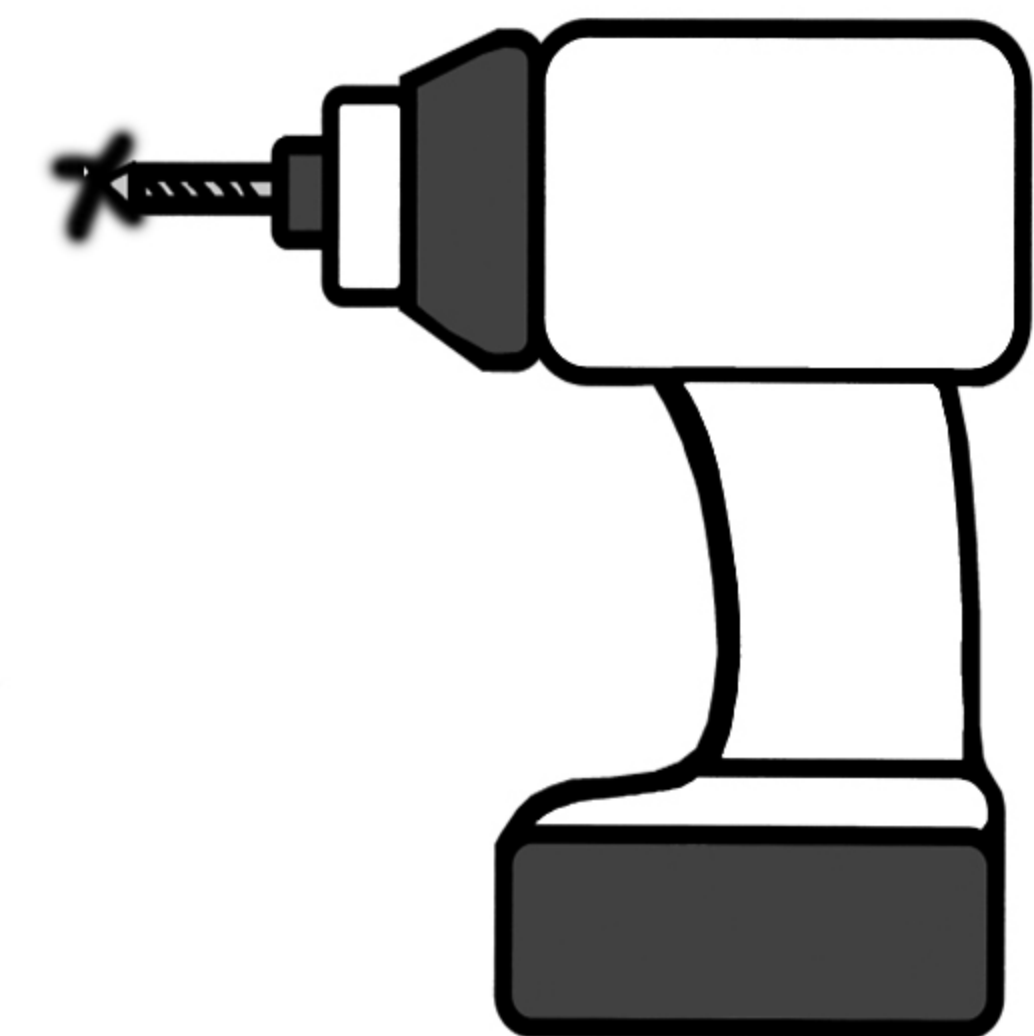

1. Drill pilot hole with 1/16" drill bit to 3/4 of depth of screw.



2. Twist hook clockwise into pilot hole until screw portion is fully inside wall.

